af-8070_manual_de_.book Seite 1 Montag, 13. Oktober 2008 3:28 15

User Manual

Digital Photo Album AF 8070

AGFAPHOTO

af-8070_manual_en_.book Seite 1 Montag, 13. Oktober 2008 3:30 15

EN

Dear Customer,

Thank you for purchasing our digital photo album. Get ready to experience photography like never before!

High quality leather case with integrated magnet in the flap for automatic switching on/off of the digital photo album by means of a magnet switch (reed contact).

High definition LCD screen

Your digital photo album has a memory card reader and a USB port for the connection of USB storage media

The internal rechargeable battery provides comfortable viewing of your photos without a power supply unit for up to 9 hours.

Supports browse mode (thumbnails of six images per page at a time).

An automatic, continuous slide show lets you enjoy all of your photos with ease.

We hope you enjoy your machine and its many functions!

About this User Manual

With the installation guide on the following pages, you can start using your machine quickly and easily. Detailed descriptions can be found in the following sections of this user manual.

Read the entire user manual carefully. Follow all safety instructions in order to ensure proper operation of your machine. The manufacturer accepts no liability if these instructions are not followed.

Symbols Used

⚠ Warns about dangers for people, damage to the device or other objects as well as possible loss of data. Injuries or damage can result from improper handling.

This symbol designates tips that will help you to use your machine more effectively and easily.

1 Safety Instructions and Recommendations

Do not make any changes or settings that are not described in this user manual.

Setting Up the Device

The device is exclusively for indoor use only. The device should rest securely on a stabile, flat surface. Position all cables in such a way that no one will stumble on them, thus avoiding possible injuries to persons or damage to the device itself.

Always handle the unit with care. Avoid touching the LCD screen. Never place heavy or sharp objects on the LCD panel, frame or power cord.

Protect the device against direct sunlight, heat, large temperature fluctuations and moisture. Do not place the device in the vicinity of heaters or air conditioners. Observe the information on temperature and humidity in the technical data.

The device should not be switched on immediately after being moved from a cold to a warm room or vice versa or into a cold room which has been heated up quickly. In such cases, wait at least three hours until the device has adapted to the changed conditions (temperature, humidity…) .

In the event that the device becomes too hot, or if you see smoke coming from the device, you must immediately pull the power cable out of the power socket. Have your device examined by trained professionals at a technical service location. To prevent the spread of fire, open flames should be kept away from the device.

Do not plug in the device in moist rooms. Never touch the mains cable or the mains connection with wet hands.

Do not allow liquids to enter into the device. Disconnect the device from the power socket if liquids or foreign objects have entered the device and have your device examined by trained professionals at a technical service location.

Do not allow children to handle the device without supervision. The packing materials should be kept out of the hands of children.

Power Supply

Use only the enclosed power adapter (see chapter Appendix / Technical Data). Check whether the mains voltage of your device (indicated on the type label) matches the mains voltage available at the setup location. This equipment complies with the voltage type specified on the unit.

Before cleaning the surface of your device, disconnect it from the power network. Never use liquid, gaseous or easily flammable cleansers (sprays, abrasives, polishes, alcohol).

Only clean the display with a dry, soft cloth. If the display breaks, a mildly corrosive liquid may escape. Avoid all contact with your skin and eyes.

Repairs

Do not make any repairs to the device yourself. Improper maintenance can result in injuries or damage to the device. Only have your device repaired by an authorised service centre.

Do not remove the type label from your device; this would void the warranty.

Photo Memory Media

Only use storage media that are compatible with the device. In order to prevent damage to the card or the unit, please turn off the power before removing or inserting the card.

Never pull out the memory card while the device is accessing it. This could cause data to be damaged or lost.

2 Overview

EN

Device Overview

Using the keys on the upper side of the device, call up the following functions.

❶ **ON/OFF** - After opening the leather case, switch the device on/off

❷ ◀ – Select previous image / select storage medium

❸ ⏯ – Confirm selection /start, stop the slide show/ switch from thumbnails to full screen

❹ ▶ – Select next image / select memory device

❺ EXIT - Press once, to switch to thumbnails / press twice, to enter storage medium selection if both a USB device and memory card reader are inserted into the device.

Behind the flap on the right hand side

❶ **SD/SDHC,MMC,MS**—Slot for Memory card

❷ ⇢- Socket—USB port for storage medium

❸ ⊖⊂⊕ - Socket – Port for power supply

❹ Two-colour battery charge indicator light (LED):
Red: The battery is charging
Green: Charging completed

❺ Fold out stand

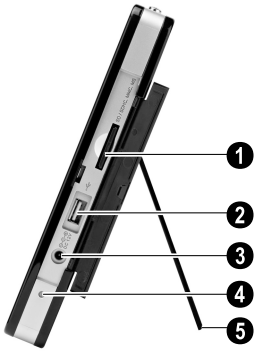

3 Initial Operation

EN

Packing Contents

❶ Digital photo album

❷ Power supply

User Guide (not depicted)

If one of the parts is missing or damaged, please contact your retailer or our customer service.

Connecting power supply

⚠ Check whether the mains voltage of your device (indicated on the type label) matches the mains voltage available at the setup location.

1 Insert the small plug of the power supply unit into the port behind the flap on the right hand side of the device Insert the power supply unit into the socket. Do not turn the device on yet!

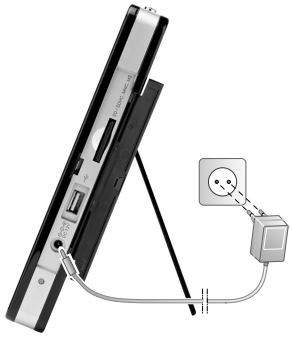

Using storage mediums

Inserting a Memory Card

1 Switch the device off using the on/off switch on the upper side.

2 Open the flap on the right hand side of the device.

3 Insert a memory card into the appropriate card slot on the right hand side of the device. Your photo frame supports the following memory cards: SD/SDHC/MS/MMC.

⚠ Only use storage media that are compatible with the device. In order to prevent damage to the card or the unit, please turn off the power before removing or inserting the card.

Never pull out the memory card while the device is accessing it. This could cause data to be damaged or lost.

4 Switch the device on using the on/off switch on the upper side. After the start screen is displayed, an overview of the photos on the memory card appears.

EN

Using a USB storage device

1 Switch the device off using the on/off switch on the upper side.

2 Attach a USB storage device (hard disc, USB memory stick,…) to the USB port on the right hand side of the device.

3 Switch the device on using the on/off switch on the upper side. After the start screen is displayed, an overview of the photos on the USB storage device appears.

Selecting the storage medium

If both a USB storage device and a memory card are inserted, a storage device selection menu appears after the device has been switched on.

1 Use ◀/▶ to select the desired storage medium.

2 Confirm with ⏯.

3 Use EXIT to return to the storage device selection menu.

If no memory card is inserted, '***NO CARD***, ***Please insert card***' appears on the screen.

If the inserted storage medium contains no photos, '***No photo***' appears on the screen.

Reed switch

You can configure your digital photo album in such a way that by opening the flap of the leather case, the device is automatically switched on.

A small magnet in the flap of the leather case activates a magnetic switch (Reed contact) in the device. As a result, the digital photo album can also be switched on/off only with the flap of the case.

1 Open the flap of the case.

2 Switch the device on using the on/off switch on the upper side of the device.

3 Close the flap.

Each time you open the flap, the digital photo album is automatically switched on.

If you use the digital photo album without the leather case as a digital photo frame, the magnetic switch does not work. In this case, switch the device on using the on/off switch on the upper side of the device.

4 Playback

EN

Photo Playback

1 Insert a memory card or attach a USB storage device.

2 Switch the device on or open the flap of the leather case.

If a memory card is inserted and a USB storage device attached, use ◀/▶ to select the desired storage medium and confirm using ⏯.

3 Press EXIT on the device.

4 Then the frame will display six thumbnail images per page.

If a memory card is inserted and a USB storage device attached, press EXIT on the device. Use ◀/▶ to select the desired storage medium and confirm using ⏯.

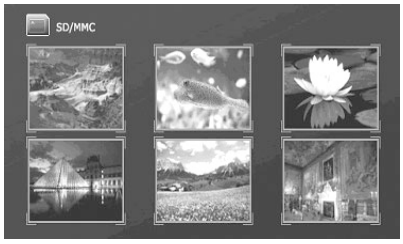

5 Select the image you want to view using ◀ or ▶.

6 Press ⏯ to display the photo.

Press ◀/▶ to skip top the previous or next image.

Slide Show

1 Press EXIT on the device.

2 Then the frame will display six thumbnail images per page.

3 Use ◀ or ▶ to select the image from which to start the slide show

4 Press ⏯ to display the photo.

5 Press ⏯ to start the slide show. A 'playback symbol' appears on the screen.

6 Press ⏯ to pause the slide show. A 'pause symbol' appears on the screen.

7 End the slide show using EXIT.

5 Service

EN

Information

Problems	Solutions
The digital photoalbum cannot be switched on.	Make sure that the built-in battery is fully charged or that the power supply unit is connected to the frame correctly.
Not all JPEG files are recognised.	Only JPEG files from digital cameras are recognised. JPEG files downloaded from the internet or JPEG files created with an image processing application may not be recognised.
Memory card can not be recognized	▪ Check whether the type of memory card is compatible with the device. ▪ Switch off the device and check the correct insertion direction of the memory card. ▪ Check the memory card for damage. ▪ Please note that some digital cameras save images in a non-standard format. Consult the user manual of your digital camera for further information.

6 Appendix

EN

Technical Data

Model ..... AF 8070
Dimensions (L × H × W) ..... 320 × 280 × 70 mm
Weight ..... 1,04 kg
Mains Connection ..... Input: 100 – 240 V ~ / 50 – 60 Hz
..... Output: 12 V ⎓ / 1,5 A
Recommended Ambient ..... 10 – 40 °C
Relative humidity ..... 5 – 80 %

Display

Screen size ..... 7 "
Aspect ratio 16:9
Resolution ..... 480 × 234 Pixel

Connections

USB port ..... USB-Host
Compatible Memory Cards ..... SD/SDHC/MS/MMC

Supported formats

Photo formats ..... JPEG

Built-in rechargeable battery

Battery type ..... LiPolymer
Capacity ..... 2400 mAh
Charging time ..... 3,5h)
Operating time (slide show) ..... 9h)

All data are provided for reference purposes only.
AgfaPhoto reserves the right to make any changes without prior notice.

AgfaPhoto Holding GmbH: AGFAPHOTO is used under license of Agfa-Gevaert NV & Co.KG. Agfa-Gevaert NV & Co.KG does not manufacture these products or provide any product warranty or support. Contact: www.agfaphoto.com

For service, support and warranty information, contact the distributor or manufacturer:sold and distributed by Sagem Communications. Contact: www.sagem-communications.com

The CE marking certifies that the product meets the main requirements of the European Parliament and Council directive 1999/5/CE on telecommunications terminal equipment, regarding safety and health of users and regarding electromagnetic interference.

The declaration of compliance can be consulted on the site www.agfaphoto.com

Preservation of the environment as part of a sustainable development logic is an essential concern of AgfaPhoto. The desire of AgfaPhoto is to operate systems observing the environment and consequently it has decided to integrate environmental performances in the life cycle of this products, from manufacturing to commissioning use and elimination.

Packaging: The presence of the logo (green dot) means that a contribution is paid to an approved national organisation to improve package recovery and recycling infrastructures to facilitate. Please respect the sorting rules set up locally for this kind of waste.

Batteries: If your product contains batteries, they must be disposed of at appropriate collection points.

Product: The crossed-out waste bin stuck on the product means that the product belongs to the family of electrical and electronic equipment. In this respect, the European regulations ask you to dispose of it selectively;

• At sales points in the event of the purchase of similar equipment.

• At the collection points made available to you locally(drop-off centre, selective collection, etc.).

In this way you can participate in the re-use and upgrading of Electrical and Electronic Equipment Waste, which can have an effect on the environment and human health.

This user manual was printed on recycled paper bleached without chlorine. This satisfies the highest standards for low environmental impact. The cardboard packaging used and the packaging inserts of paper and cardboard can be disposed of as waste paper. The plastic foil may be submitted for recycling or disposed of with waste not intended for recycling, depending on the requirements in your country.

Trademarks: The references mentioned in this manual are trademarks of the respective companies. The lack of the symbols ® and ™ does not justify the assumption that these dedicated terms are free trademarks. Other product names used herein are for identification purposes only and may be trademarks of their respective owners. AgfaPhoto disclaims any and all rights in those marks.

Neither AgfaPhoto nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs, or expenses incurred by the purchaser or third parties as a result of accident, misuse, or abuse of this product or unauthorized modifications, repairs, or alterations to this product, or failure to strictly comply with AgfaPhoto operating and maintenance instructions.

AgfaPhoto shall not be liable for any damages or problems arising from the use of any options or any consumable materials other than those designated as original AgfaPhoto products or AgfaPhoto approved products.

AgfaPhoto shall not be held liable for any damage resulting from electromagnetic interference that occurs from the use of any interface cables other than those designated as AgfaPhoto products.

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of AgfaPhoto. The information contained herein is designed only for use with this product. AgfaPhoto is not responsible, if this information is applied to other devices.

This user manual is a document that does not represent a contract.

Errors, printing errors and changes are reserved.

Copyright © 2008 Sagem Communications

af-8070_manual_16-ru_.book Seite 12 Montag, 13. Oktober 2008 4:10 16

AgfaPhoto Holding GmbH, www.agfaphoto.com,
AGFAPHOTO is used under license of Agfa-Gevaert NV & Co. KG,
produced for and sold by Sagem Communications, www.sagem-communications.com

253153991-A